



1 x WCMA

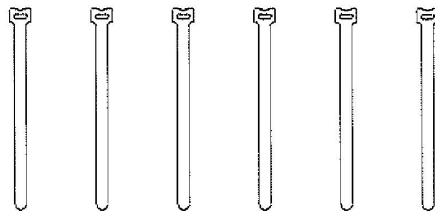

6 x Velcro strap



## Step 1&Step2

Attach the inner member connector to the rear of the right hand inner slide member, and supporting bar connector to the rear of the right hand middle slide member as shown on the illustration.

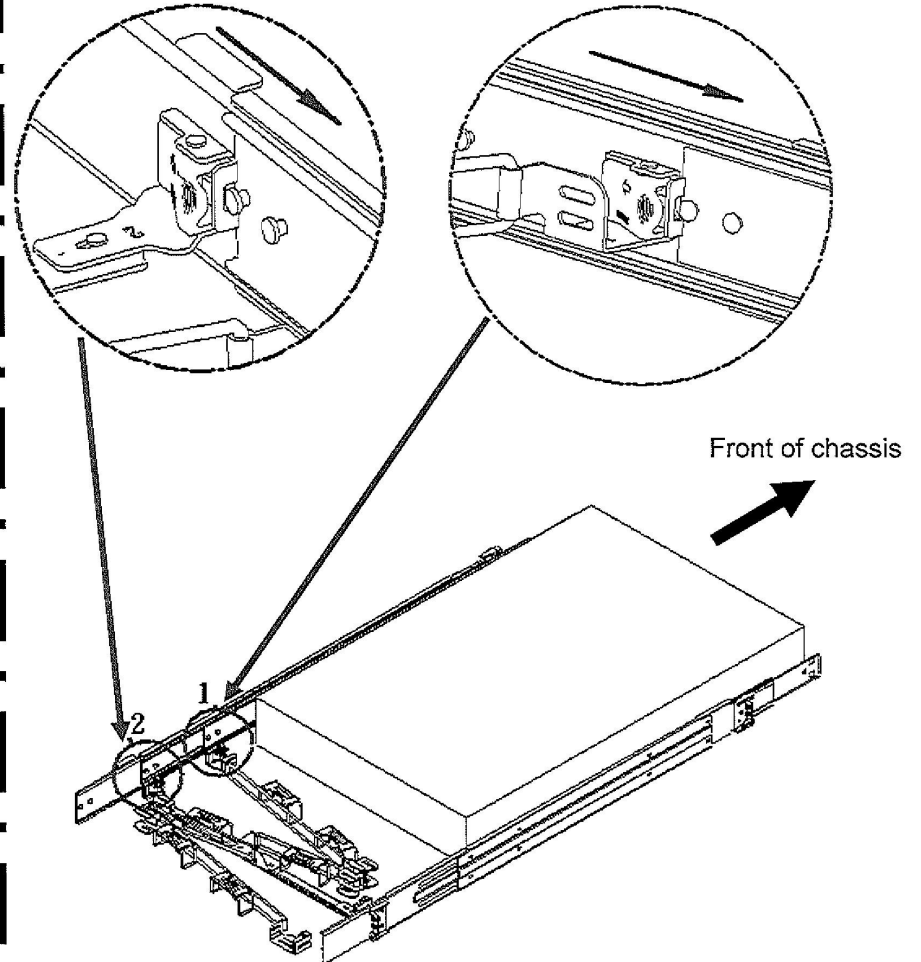


## Step 3&Step4

Attach the supporting bar connector to the rear of left middle member, and the outer member connector to the rear of the left outer member as shown on the illustration. .

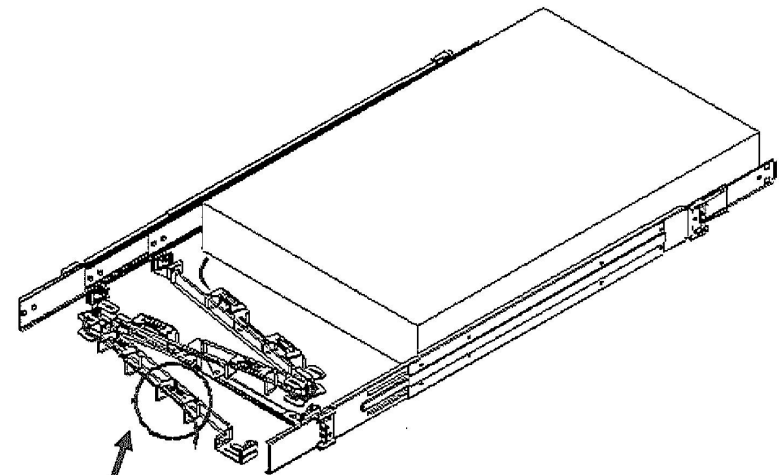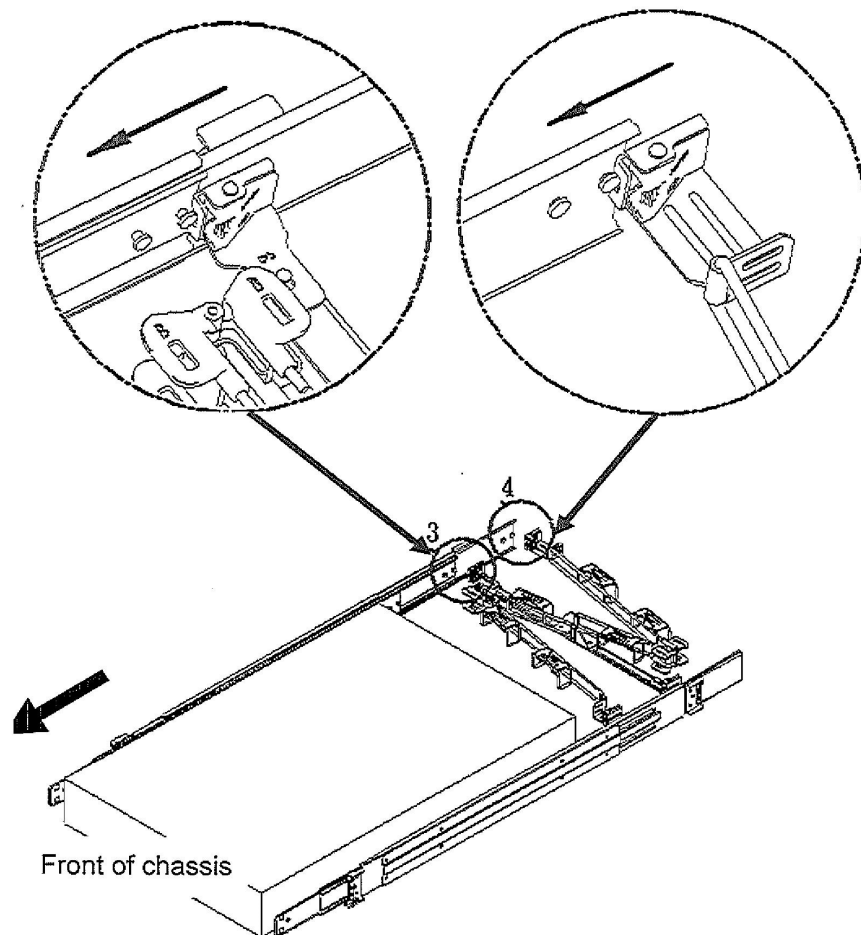

## Step 5

Open the red cap as shown, and routing the cables and cords through the wire carrier. Very important!! Use Velcro strap to fasten the cables and cords. You may find slot on connectors and aluminum joints. Use 2 straps on each joint and 1 on each connector. .

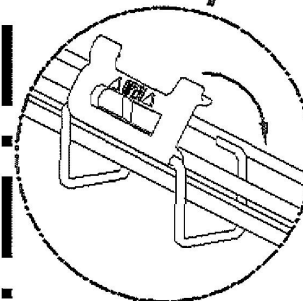

Move the chassis back and forth to see if cable arm motion is smooth. If not so, loose the strap a little bit for better motion.